



Complete set-up diagram

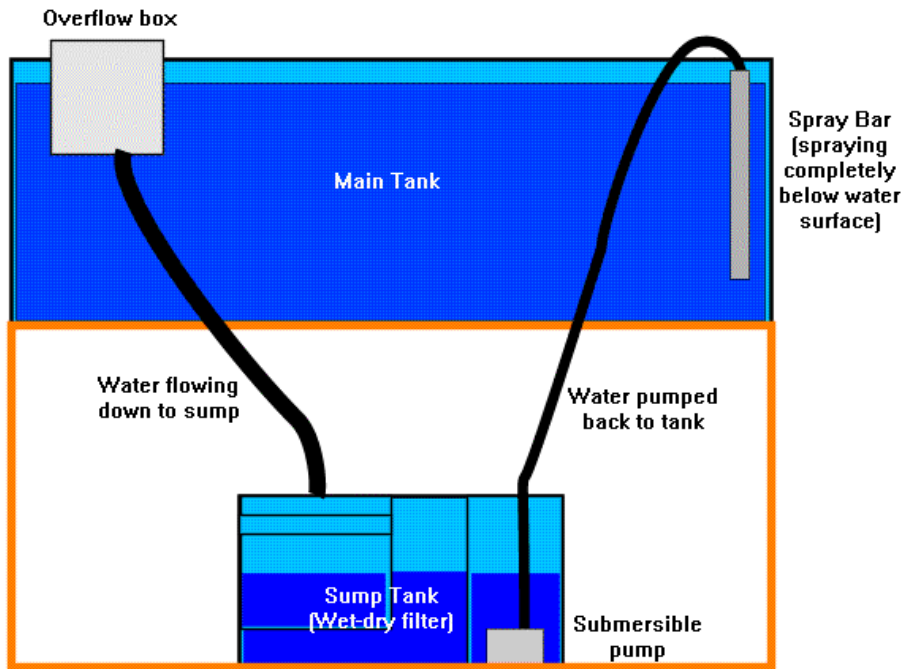

*For the spray bar, use your current one.

*Get a lighter to heat up the end of the drain hoses to easily connect to the pvc.

Wet-Dry Filter Set Up

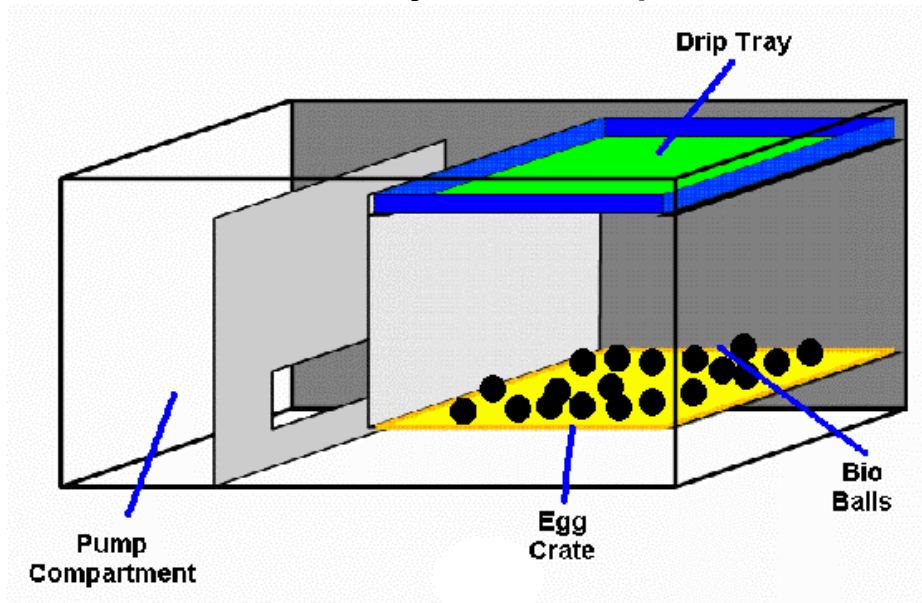

Eshopps

168 Mason Way, Unit B-2, City of industry, CA 91746
Tel: 1-626-968-3678 Fax: 1-626-236-9387
www.eshopps.com, e-mail: sales@eshopps.com